


READ FIRST

Warning: Engines emit potentially deadly (CO) carbon monoxide in the form of an odorless and colorless gas

DO NOT OPERATE INDOORS, NEAR STRUCTURE OPENINGS OR WITHIN A CONFINED SPACE

(Read manual for more details and additional warnings)

Portable Generator Placement Guide to help prevent fire and lethal CO exposure

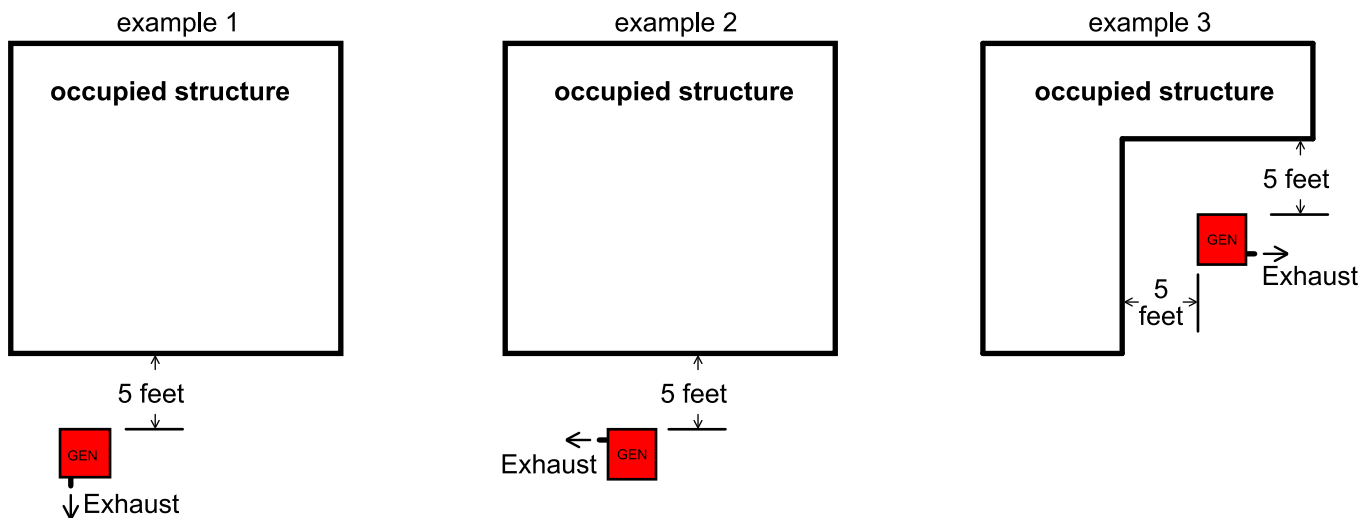

- 1) Exhaust must be aimed away or parallel to structure, directed away from patios, play areas, or where people are or will congregate while generator is running.
- 2) The nearest window, vent, door or any other opening (even if closed at the time) must be at least 5 feet from any surface of the generator, and a minimum of 10 feet is recommended.
- 3) The generator must be at least 5 feet from any surface that has less than a 1 hour fire rating.
- 4) Furnace and other intakes must be a minimum of 10 feet from exhaust end of generator.
- 5) Do not operate generator on combustible surface or in vegetation areas where any weeds, shrubs, grass or other growth can be ignited from exhaust. Maintain a minimum of 4 feet from any plants, weeds, or growth to exhaust and 18 inches from front air intake.
- 6) Read OEM manual AND supplement before operating your generator.
- 7) Install and maintain a battery backed-up CO detector inside the nearest bedroom to where the generator will be running outside.
- 8) See NFPA 37 and contact your local town or county inspector-in-charge for more information.

GenConneX™

35 Pond Park Road, Unit 11 Hingham, MA 02043 USA

www.GenConneXDirect.net

1-800-341-0792