

# **Tech Note:**

## **Genconnex® EU2200i**

### **natural gas orifice installation**


This technical note describes how to change the fuel orifice on the Genconnex® modified Honda EU2200i for natural gas operation.

Tools needed:  
medium flat blade screw driver,  
1/8" hex head allen wrench


Est. time for install:  
5 min.



**Pic 1**

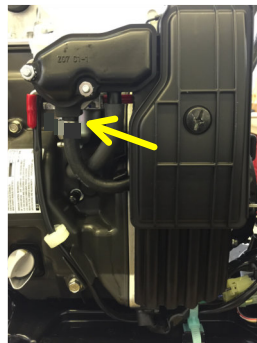

**Pic 2**

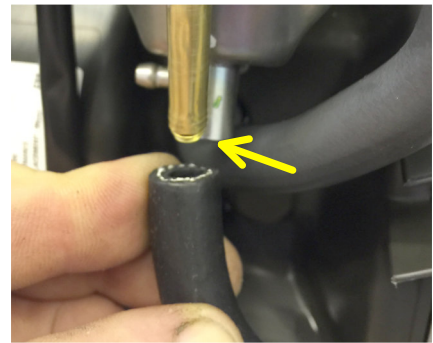

**Pic 3**

Step 1: Open side door to gain access to air cleaner and fuel module.

Step 2: Locate the fuel hose going to the carburetor adapter.

Step 3: Pull down on hose to off of brass injector tube and remove the brass set screw installed in the now showing end of the brass tube. Replace with appropriate orifice for your fuel source using the supplied allen wrench.

Step 4: Push fuel tube back onto brass injector and attach outer door.

**Orifice code:**  
**Propane: small hole size**  
**Natural Gas: large hole size**